 
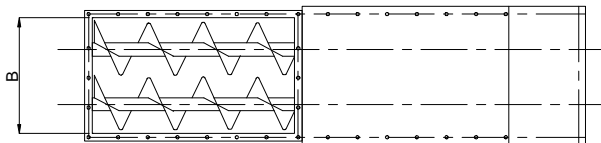 
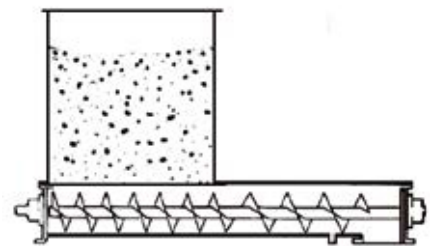 


Doserskruv

Skruv för kontinuerlig dosering av besvärliga material.
Skruven monteras i botten på en behållare och material doseras med hjälp av 2-6 stycken skruvar.
Skruven utrustas med fyrkantigt in- och utlopp.
Skruvarna är spiral eller paddel skruvar.

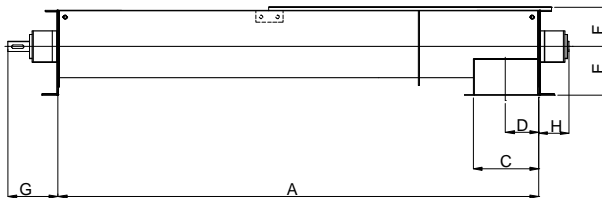

Ø	A	B						C	D	E
		2 skruvar	3 skruvar	4 skruvar	5 skruvar	6 skruvar				
150	1,5-2-2,5-3	340	505	670	835	1000	172	86,0	145	
200	1,5-2-2,5-3	445	665	885	1105	1325	222	111,0	185	
250	1,5-2-2,5-3	545	815	1085	1355	1625	262	131,0	215	
300	2-2,5-3-3,5-4	640	955	1270	1585	1900	315	157,5	245	
350	2-2,5-3-3,5	755	1135	1515	1895	2275	370	185,0	275	
400	2,5-3-3,5	850	1275	1700	2125	2550	417	208,5	305	
500	2,5-3	1045	1565	2085	2605	3125	512	256,0	380	
600	2,5-3-3,5-4	1245	1865	2485	3105	3725	607	303,5	465	